

#9000/9100 series locks
Directions for reversing hands

1. Insert 8-32 x 5/8 screw (#1 case side) to hold lever spring in place
2. Flip lock over, remove cover (5 screws)
3. To flip latch:
 - Remove latch lever #2 and stop lever #3
 - Flip latch over
 - Replace latch lever #2 and stop lever #3
4. To flip hubs:
 - Take tension of retractor spring #4
 - Remove retractor #5
 - Flip hubs #6 over
 - Replace retractor #5 and retractor spring #4
5. Replace the cover (5 screws)
6. Remove 8-32 x 5/8 screws (#1)

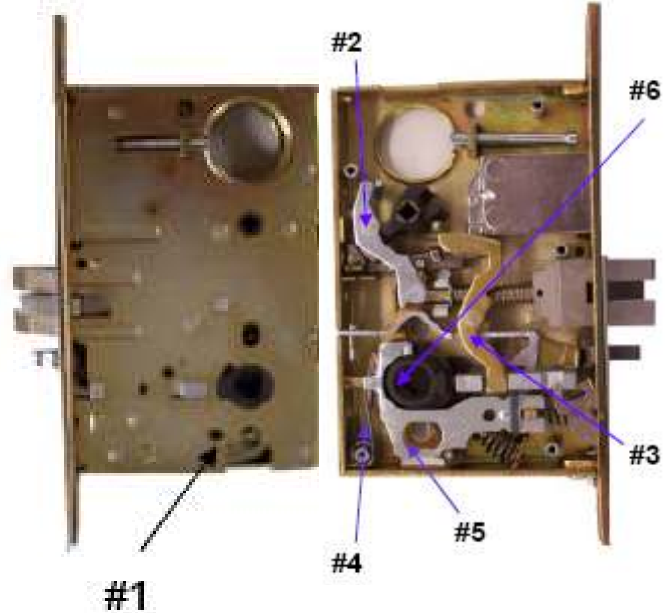


Chart for hand changing L x L or K x K*

Current Hand	Required Hand	Task	Strike Needed
LH	RH	Flip latch/hubs	RH
RH	LH	Flip latch/hubs	LH
LHR	RHR	Flip latch/hubs	LH
RHR	LHR	Flip latch/hubs	RH
LH	LHR	Flip latch only	RH
RH	RHR	Flip latch only	LH
LH	RHR	Flip hubs only	LH
RH	LHR	Flip hubs only	RH

* TP x L or TP x K any hand, flip latch only

