
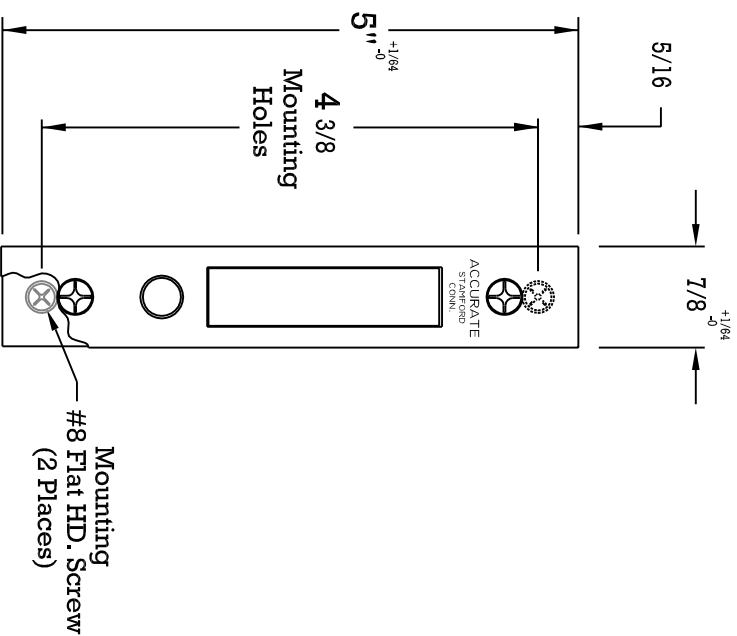


# 2000 Series

## POCKET DOOR PULL INSTALLATION TEMPLATE

Note: All Dimensions Reflect Suggested Mortise Prep Dimensions. (Actual Lock Dimensions Are Slightly Smaller).

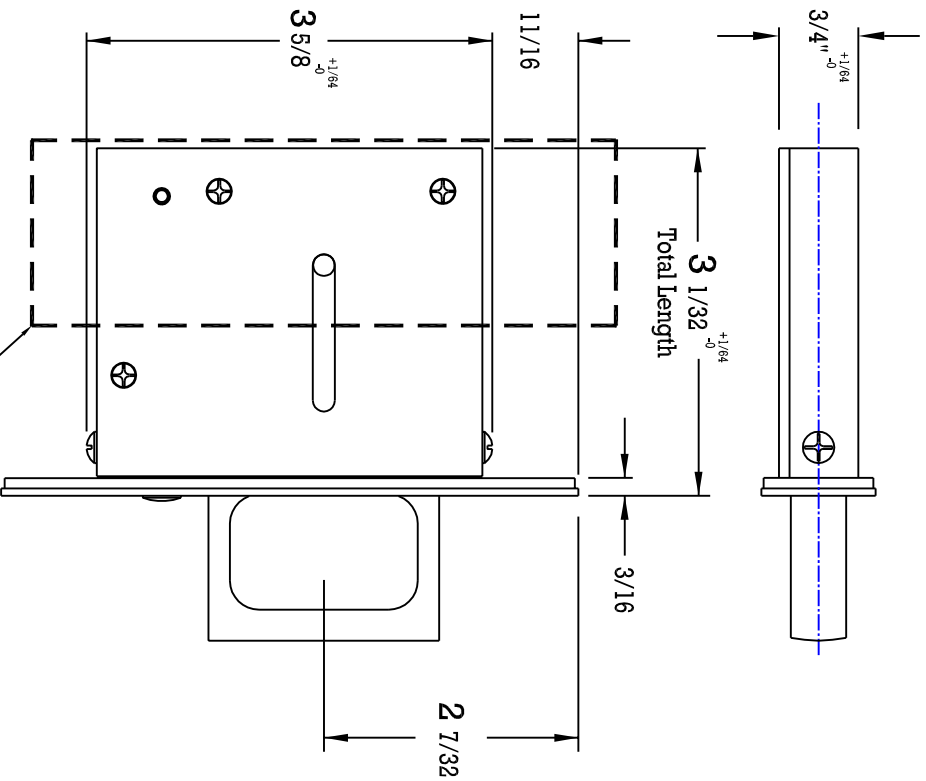

Mounting  
#8 Flat HD. Screw  
(2 Places)

Note: When Using Accurate

Flush Pulls See Template  
Before Preparing Holes.