



2001 SDL-1	Bore half way - OUTSIDE ONLY	2001 SDL-2	Bore Thru Door	2001 SDL-3	Bore Thru Door	2001 SDL-4	Bore half way - INSIDE ONLY	2001 SDL-5	Bore Thru Door
------------	---------------------------------	------------	----------------	------------	----------------	------------	--------------------------------	------------	----------------

*Important: CHECK CHART BEFORE BORING ANY HOLES

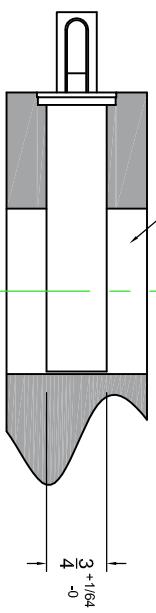

*Mount the trim with the screws provided, after the lock is installed and works properly. Always pre-drill screw holes

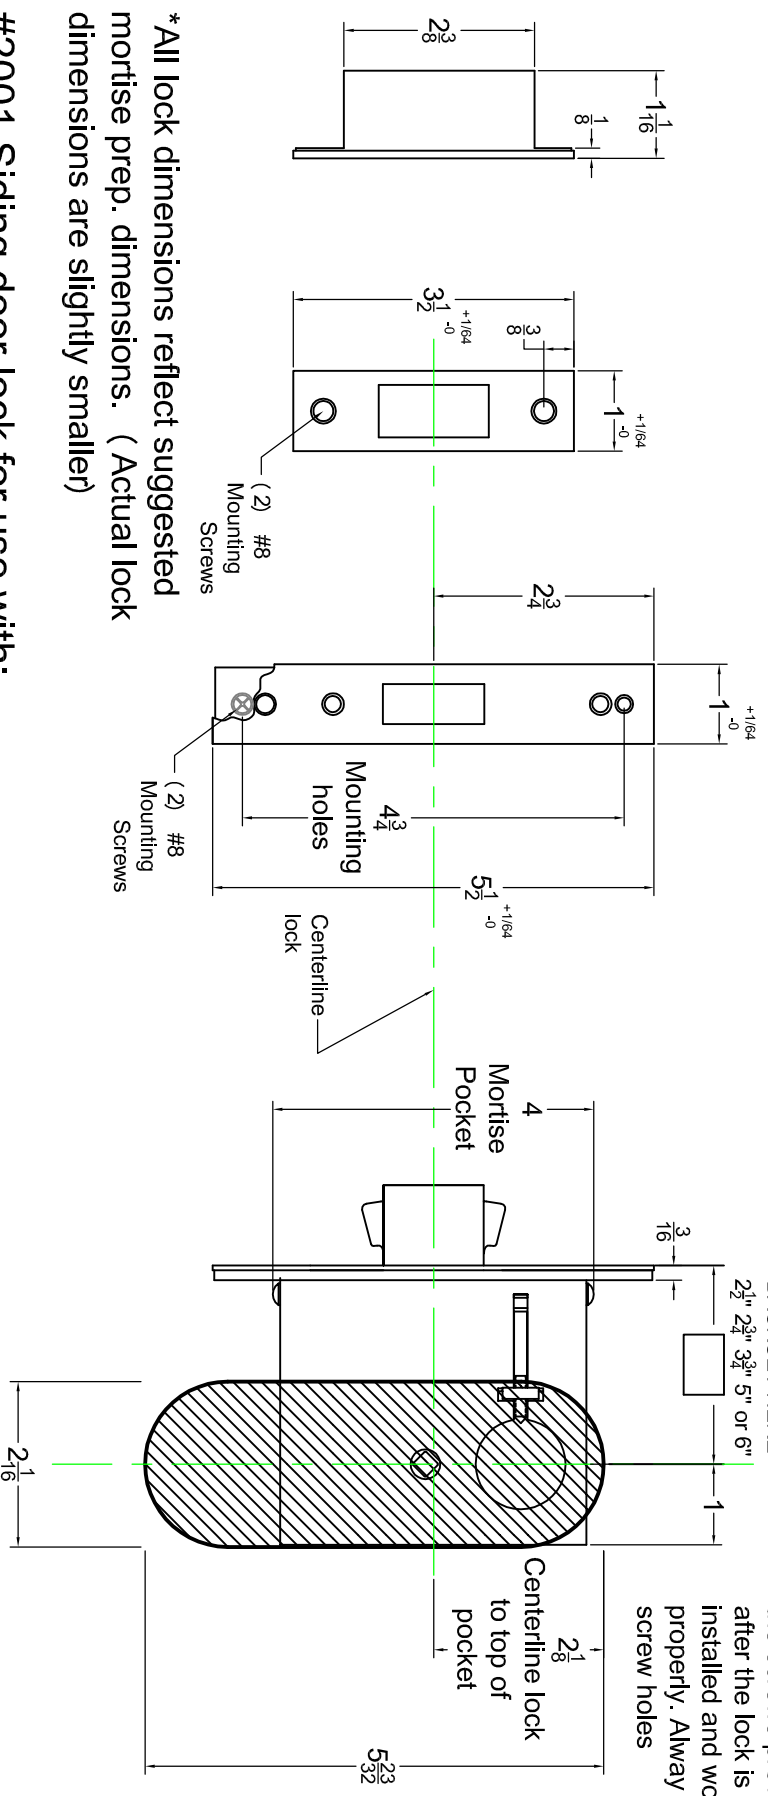

*All lock dimensions reflect suggested mortise prep. dimensions. (Actual lock dimensions are slightly smaller)

#2001 Siding door lock for use with:

- A2002B or CA2002B Trim
- N2002B or CN2002B Trim
- O2002B or CO20028 Trim

Template #2001A/CA

Accurate Lock and Hardware Co., LLC
 One Annie Place
 Stamford, CT 06902
 P (203) 348-8865 F (203) 348-5234
 Sales@accuratelockandhardware.com

