


Accurate Lock and Hardware Co.

Manufactures of
Custom Locks and Architectural Hardware

9500

Dead Bolt Lock Installation Template

Note: All Dimensions Reflect Suggested Mortise Prep Dimensions. (Actual Lock Dimensions Are Slightly Smaller).

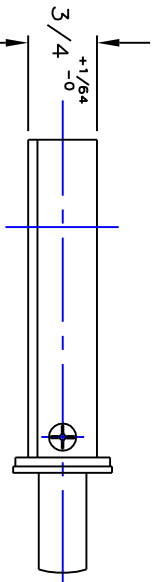

9501	1 1/4 Cylinder Outside Only	9502	1 1/4 Cylinder Both Sides	9503	1 1/4 Cylinder Outside Only 5/8 Turn Piece Inside Only
------	-----------------------------	------	---------------------------	------	---


Find Catalog Numbers Which Will Show Cutouts For Functions Desired. Refer To Composite Template Above For Locations And Sizes Of Holes.

Responsibility
Door And Frame Manufactures Are Responsible For Providing Adequate Construction Or Re-inforcement For Proper Installation Of Hardware Shown.

Annie Place, Stamford, CT. 06902
(203) 348-8865 FAX (203) 348-5234
E-MAIL: Sales@Accurate.to
www.Accurate.to

Insert BackSet As Req'd

2-1/2, 2-3/4, 3-3/4, 5" or 6"

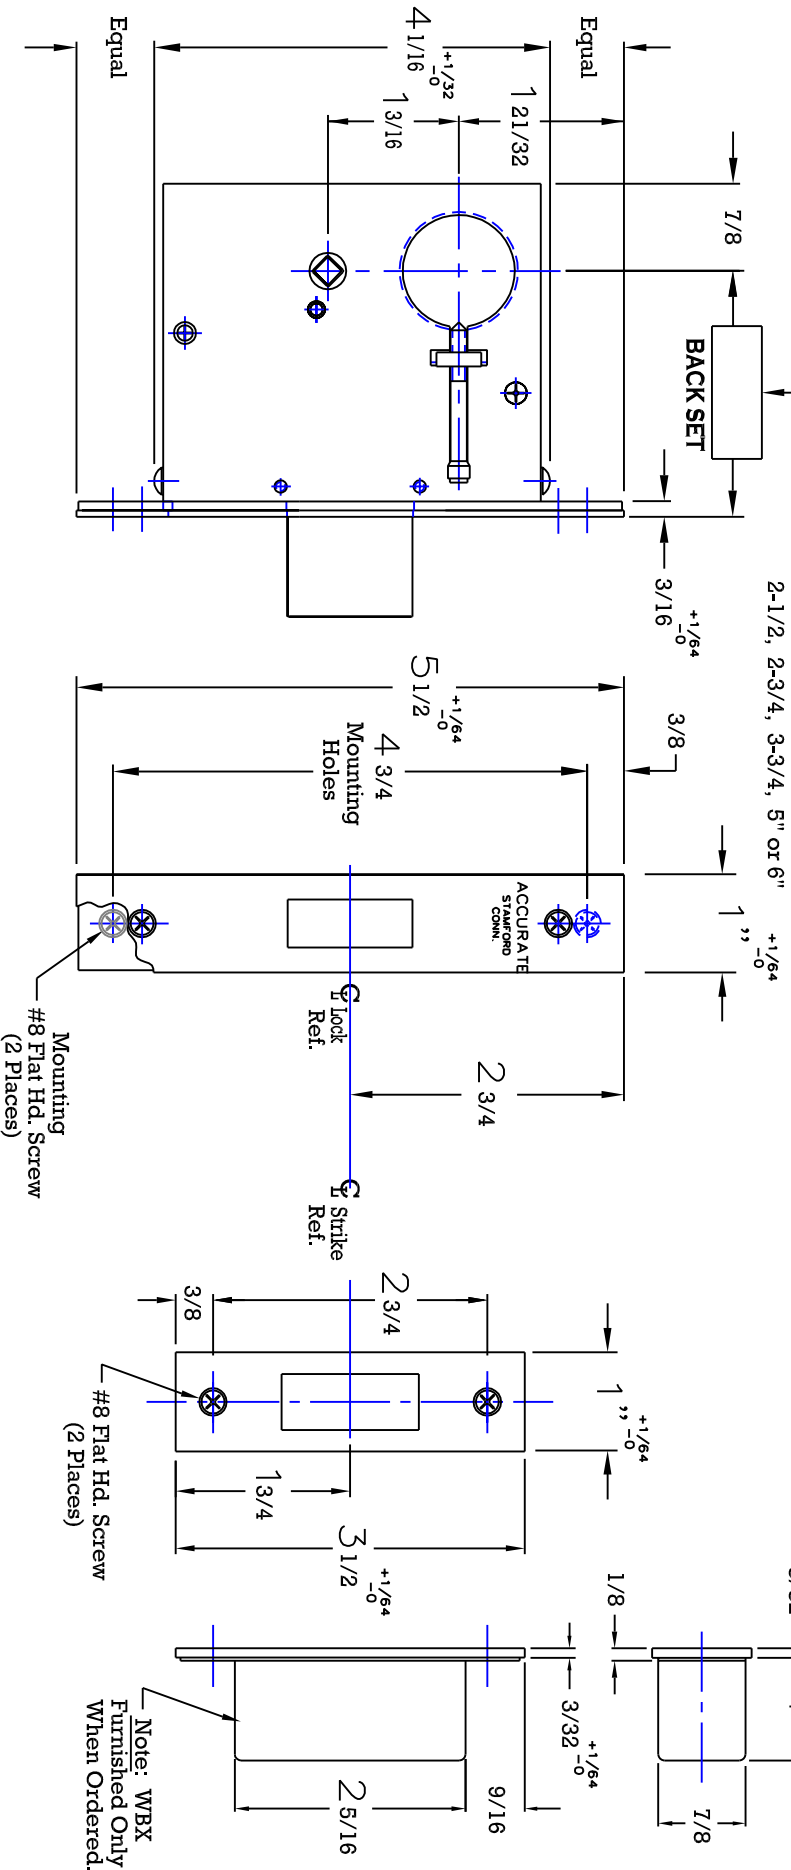

Note: WBX
Furnished Only
When Ordered.

Mounting
#8 Flat Hd. Screw
(2 Places)

#8 Flat Hd. Screw
(2 Places)